

**Look at it
this way**

The world needs concrete solutions

Cracks & Autogenous Healing

What is an Acceptable Crack Width in Concrete Pipe?

Written by: Tyson Dyck, EIT



Through proper design and curing, concrete can be considered one of the most durable building materials in existence. Concrete structures typically have a design life of 100 years; however, countless examples of ancient concrete structures are still erect today. Concrete is inherently strong under compressive stresses but weak in tension. This is why most concrete structures have embedded reinforcement to resist these tensile forces, typically in the form of steel wire/rods. Some cracking is normal and usually accounted for in a design. This just implies that the tensile forces have exceeded the concrete's strength capacity and the force is getting transferred to the steel reinforcement.



Figure 1: The Pantheon of Rome. This ancient concrete structure was originally constructed in 126AD.

So what is an acceptable level of cracking in concrete? There's no straight forward answer as different civil engineering disciplines have their own design criteria. Concrete sub-structures typically have more tolerance to cracking versus concrete bridges and buildings which are more exposed to weathering from the natural elements. Based on the American Association of State Highways and Transportation Officials' (AASHTO) post installation guidelines for underground concrete pipe, a key reference for many municipal specifications, the following crack criteria is used [1]:

- Longitudinal crack width $< .05''$
 - Considered minor and not a cause for remediation.
- Longitudinal crack width greater than $.05''$ but less than $.10''$
 - *In areas where soil and runoff pH > 5.5 , not a cause for remediation.*
- Longitudinal crack width $> .10''$
 - Remediate or replace the pipe.

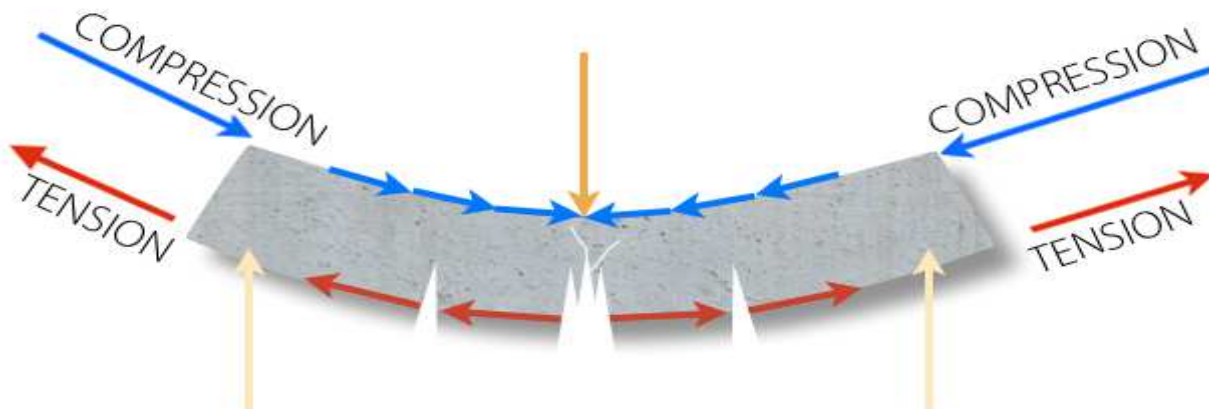


Figure 2: A simply supported concrete beam reacting to a point load.

Autogenous healing of concrete occurs when the continuity between two sides of a crack is restored without repair work. According to the Concrete Society, based in the UK, “Autogenous healing is the natural process of crack repair that can occur in the presence of moisture and the absence of tensile stress” [2]. The formation of calcium carbonate crystals. CaCO_3 is the primary cause for the self-healing of cracks.



Figure 3: Calcium carbonate crystals have completely formed over an existing crack in this concrete pipe.

Calcium carbonate crystals are formed in two phases: The first

phase involves water reacting with calcium ions, Ca^{2+} , on the surface of the crack; this process occurs much more rapidly than the second phase [3]. After these surface ions are consumed, Ca^{2+} diffusion will develop due to the concentration gradient and continue to form CaCO_3 crystals at a slower rate. Through laboratory testing, it was found that autogenous healing is influenced by the crack width and the prevailing water pressure. Furthermore, the type of cement used and the type of water have no influence in forming CaCO_3 . The formation of CaCO_3 crystals can be accelerated by:

- a rising water temperature
- a rising pH of the water
- a falling CO_2 partial pressure in the water

REFERENCES

1. AASHTO, “*Pipe Culvert Inspection for New Construction*”, <http://inlandpipe.com/sites/inlandpipe.com/files/PDFs/AASHTO%20Post%20Installation%20Inspection%20Guideline.pdf>
2. Roberts, D., “*Autogenous healing: the self sealing of fine cracks*”, July, 2003, <http://www.concrete.org.uk/fingertips-nuggets.asp?cmd=display&id=651>
3. Edvardsen, C., “*Water Permeability and Autogenous Healing of Cracks in Concrete*”, August 1999, <http://www.unitedstatesconcrete.com/AutogenousHealingofCracks.pdf>

IMAGES

Title. www.a1foundationcrackrepair.com/concrete-floor-cracks.html

1. www.mejplacehostel.com/17545/
2. www.dentapreg.com/Technicians/Home/Bundle/Clinical-Applications
3. www.concretepipe.org/wp-content/uploads/2014/07/Post_Install_Inspect_081011.pdf



Contact us for all your precast needs:

Derek Light, P. Eng.

Technical Marketing Manager, Canada Region
Cell: (403) 999-1246
Phone: (403) 720-9324
Derek.Light@lehighhanson.com
www.inlandpipe.com

Tyson Dyck, EIT

Technical Marketing Engineer in Training
Cell: (587) 990-8903
Phone: (780) 448-1351
Tyson.Dyck@lehighcement.com
www.inlandpipe.com

Tannis Karklin, EIT

Technical Marketing Engineer in Training
Cell: (204)-250-5270
Phone: (204-336-5013
Tannis.Karklin@lehighhanson.com
www.inlandpipe.com



British Columbia

OCEAN PIPE
9265 Oak St.
Vancouver, BC V6P 4B8
Toll free tel: 1888 788 2211
Office tel: 604 269 6700
Fax: 604 261 6751

Southern Alberta

INLAND PIPE
7336 112th Ave. NW
Calgary, AB T3R 1R8
Toll free tel: 1 800 268 078
Office tel: 403 279 5531
Fax: 403 279 7648

Northern Alberta

INLAND PIPE
12250 170 Street
Edmonton, AB T5V 1L7
Tel: 780 448 1351
Fax: 780 448 1354

Saskatchewan

INLAND PIPE
300 10th Ave.
Regina, SK, S4N 6G7
Toll Free tel: 1877 974 7473
Office tel: 204 334 4300
Fax: 204 334 7957

Manitoba

INLAND PIPE
2494 Ferrier St.
Winnipeg, MB, R2V 4P6
Toll Free tel: 1 877 974 7473
Office tel: 204 334 4300
Fax: 204 334 7957
